


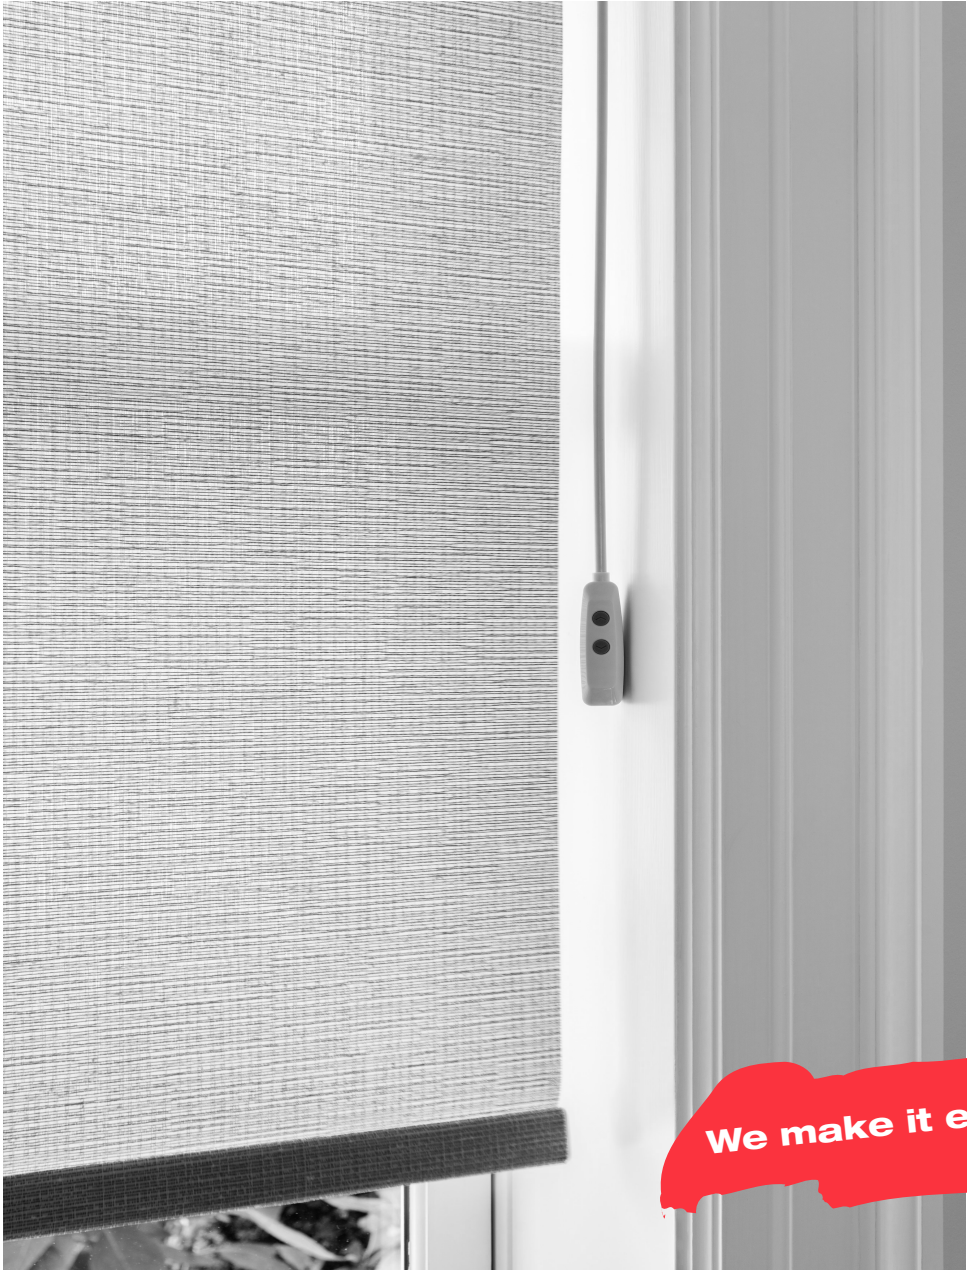


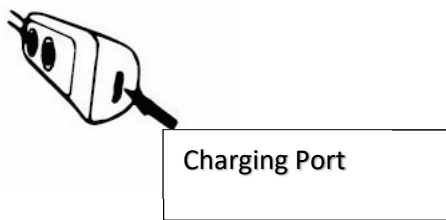

Quick Press Wand Programming Guide

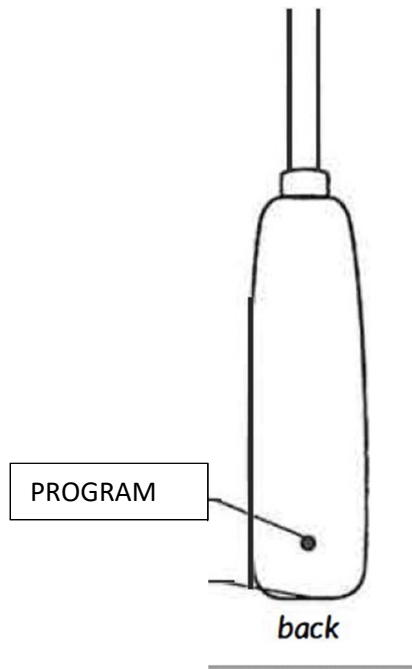

We make it easy!

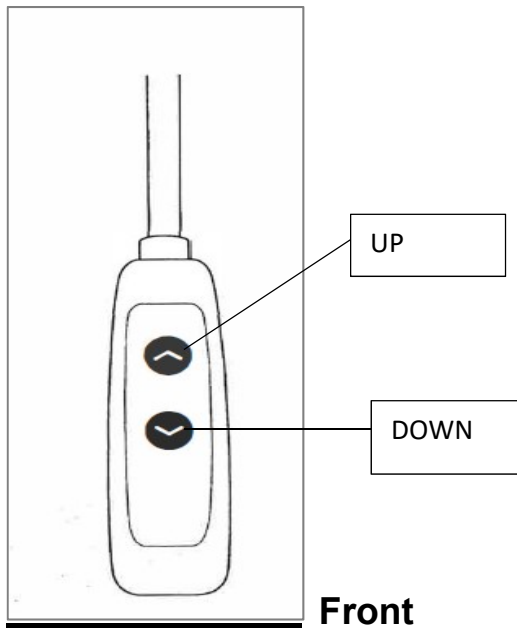

Basic Operations of Quick Press Wand

<u>Command</u>	<u>Direction</u>
Go to Upper Position	Hold UP arrow for 2 seconds
Go to Lower Position	Hold DOWN arrow for 2 seconds
Stop shade	Press UP or DOWN arrow once
Go to Favorite Position 1	Double tap UP arrow
Go to Favorite Position 2	Double tap DOWN arrow


1. Setting or Adjusting Shade Limit

A. Upper Limit


- Hold the **PROGRAM** button for 5 seconds. The motor will move up and down a short distance and a red light on the motor head will illuminate to indicate the process to set up the upper limit has started .
See photo below:




- Press and release (tap) the **UP** button once to tell the shade you are setting the upper limit

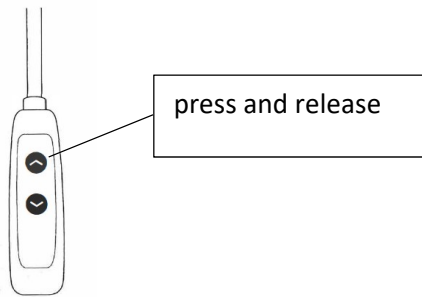

- Press and hold the **UP** button to go to the desired upper position. Release at the upper limit position. If the limit needs to be fine tuned tap the **UP/DOWN** button until the desired position is achieved

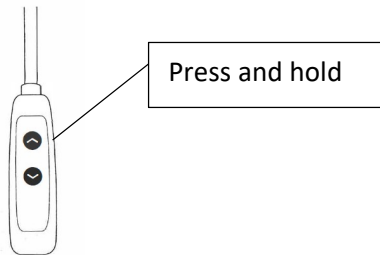

- Press the **PROGRAM** button once on the back of the wand. The motor will move up and down a short distance to confirm that the new upper limit has been saved

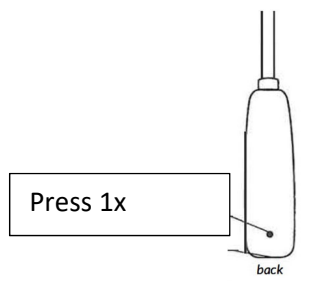


B. Lower Limit


- Hold the **PROGRAM** button for 5 seconds. The motor will move up and down a short distance and a red light on the motor head will illuminate to indicate the process to set up the upper limit has started .
See photo below:




- Press and release (tap) the **DOWN** button once to tell the shade you are setting the lower limit

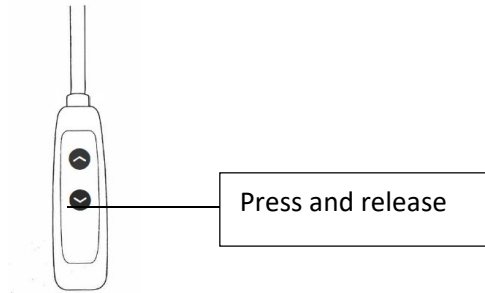

- Press and hold the **DOWN** button to go to the desired lower position. Release at the lower limit position. If the limit needs to be finetuned tap the **UP/DOWN** button until the desired position is achieved

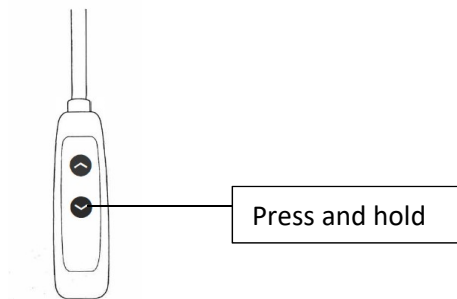

- Press the **PROGRAM** button once on the back of the wand. The motor will move up and down a short distance to confirm that the new lower limit has been saved

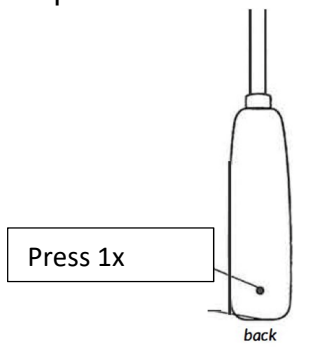


2. Setting Favorite Position

The wand motor can store two favorite positions.

A. Setting favorite position 1 :

- Using the **UP** or **Down** buttons move the shade to your desired favorite position.
- Double tap the **PROGRAM** button, then double tap the **UP** button
Please note this process must be completed within 10 seconds

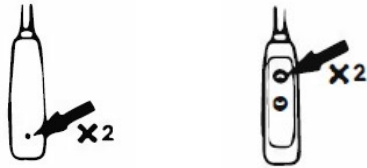

- The shade will move up and down a short distance to confirm that the favorite position 1 was saved

B. Setting favorite position 2 :

- Using the **UP** or **Down** buttons move the shade to your desired favorite position.
- Double tap the **PROGRAM** button, then double tap the **DOWN** button
Please note this process must be completed within 10 seconds



- The shade will move up and down a short distance to confirm that the favorite position 2 was saved

3. Erasing Limits and Favorite Positions

A. Deleting Both Limits and Favorite Positions

- Double tap the PROGRAM button on the back of the wand. A red light on the motor head will illuminate to indicate the process of deleting limits has started



- Hold the PROGRAM button on the back of the wand for 5 seconds until the shade moves up and down a short distance




B. Deleting Just the favorite position

- Using the UP/DOWN buttons move the shade to the desired favorite position to delete
- Repeat the steps for setting the favorite position in order to delete it
- The shade will move up and down a short distance to confirm the favorite position was deleted

4. Changing direction of Shade

A. Hold the **PROGRAM** button on the back of the wand for 5 seconds. The shade will move up and down a short distance to indicate the process has started

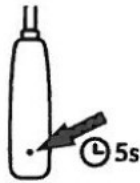

B. Hold the PROGRAM button on the back of the wand for 5 seconds again. The shade will move up and down a short distance again to indicate the shade direction is now reversed

