


Addendum for Serenity™/Cascade Installation Guide if you purchased Serenity III™ Shades


ADDENDUM TO GUIDE 468355

Due to a different bracket for Serenity III Shades, the following illustrations replace those in the main guide's installation steps: "Getting Started" and "Fitting the shade into the brackets".


Serenity III bracket

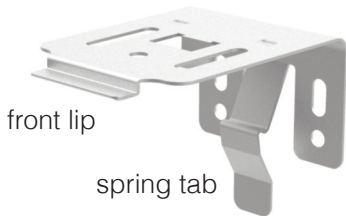


Inside mount:

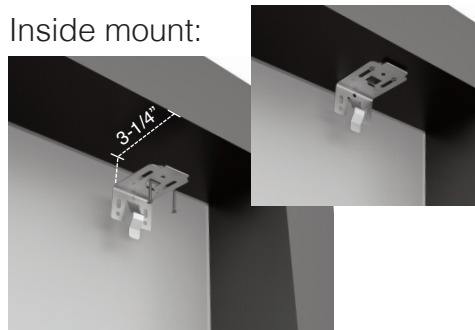

Outside mount:

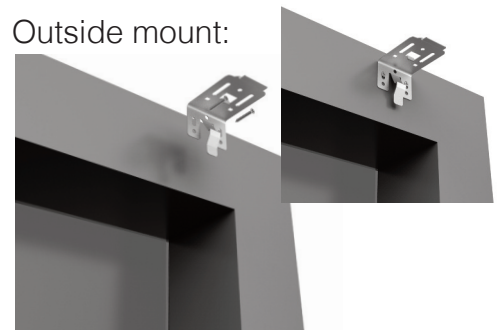


Note: For the shade to be flush within the frame, the back edge of the brackets should be 3/4" back from the front of the frame.

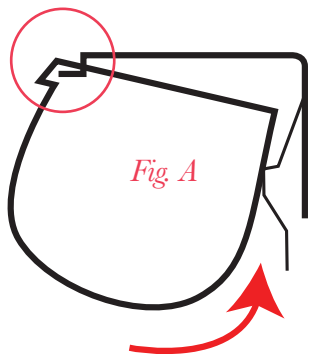

Fitting the shade into the brackets:

1. After securing the Serenity III brackets onto the frame, hang the inside front edge of the headrail onto the front lip of the bracket (*fig a*).

2. Rotate the headrail back and upwards until the back of the headrail engages with the bracket's spring tab (*fig b*).

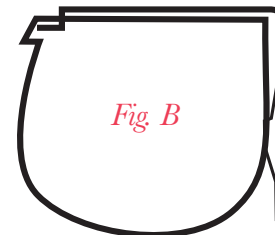

3. Installed shade should fit securely in its brackets.

PLEASE FOLLOW ALL OTHER INSTRUCTIONS IN THE ORIGINAL GUIDE AND ADDENDUM, PAYING CAREFUL ATTENTION TO SECURING THE CHAIN

Adenda para Serenity™ / Cascade Guía de Instalación si adquirió Cortinas Serenity III™


ADENDA A LA GUÍA 468355

Debido a un soporte diferente para las Cortinas Serenity III, las ilustraciones siguientes sustituirán a las que figuran en la guía principal de los pasos de instalación: "Empezando" y "Colocando la cortina en los soportes".

Soporte Serenity III



Montaje interior:

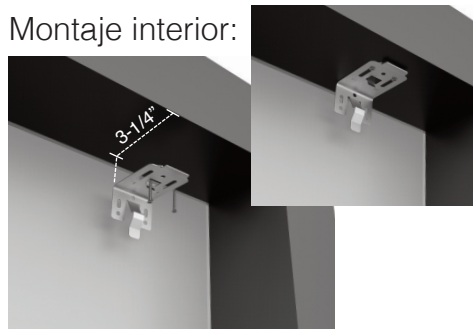

Nota: Para que la cortina encaje dentro del marco, el borde posterior de los soportes debe estar a 3 1/4" detrás del frente del marco.

Montaje exterior:

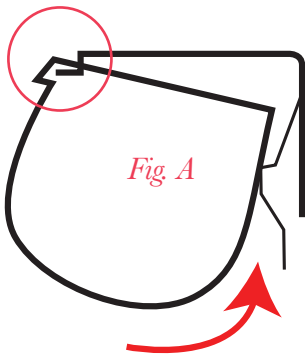
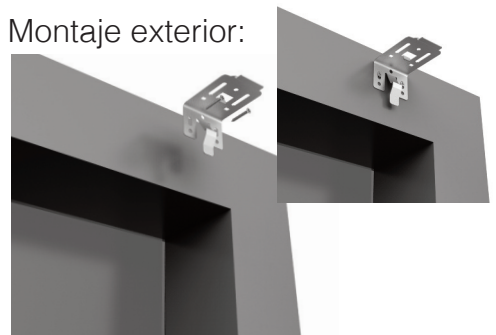


Fig A

Colocando la cortina en los soportes:

1. Después de asegurar los soportes del Serenity III en su marco, cuelgue el borde interior de la barra frontal en el borde delantero del soporte (*fig. a*).
2. Gire la barra frontal hacia atrás y hacia arriba hasta que la parte posterior de la barra frontal engrane con la lengüeta del resorte del soporte (*fig. b*).

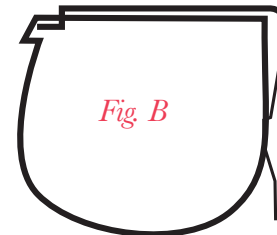


Fig B



3. La cortina instalada debe encajar firmemente en sus soportes.

SIGA EL RESTO DE LAS INSTRUCCIONES EN LA GUÍA ORIGINAL Y ADENDA, PRESTANDO UNA ATENCIÓN ESPECIAL A LA FIJACIÓN DE LA CADENA